


Cold Shower Connection Procedure

Connect Hot and Cold water hoses to back of shower. Male Garden hose thread is the connections at the shower. Cold water supply goes on left. Hot water supply goes on the right. Make sure your supply piping for the hot is rated for at least 140 degrees. **{See picture below}**.

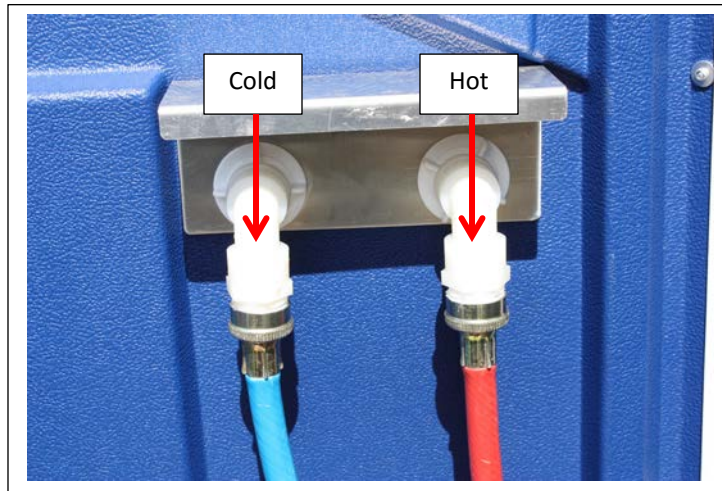

Assemble and install the shower wand.

Find one of the 1-1/4" plugs on the back of the shower unit skid. Remove it and adapt the threaded port to connect to the sanitary gravity drain.

Turn on water supply. Check all outside water connections for leaks. Check inside Shower for leaks. With hot and cold water knobs in the on & off position check around knobs, hose connections, and Shower Head for leaks.

Shower is ready for use.